

Pantone Black C


- Blade Cut
- Crease

成品尺寸：90x140mm

HOW TO CLEAN

1. Twist the Dust Collecting Bin to unlock and gently remove the dust bin.
2. Remove the HEPA Filter.
3. Empty the Dust Collecting Bin of all dust and particles.
4. Rinse the HEPA Filter and the Dust Collecting Bin under running water.
5. Be sure that all parts are dry before reassembly. A damp HEPA Filter will significantly reduce the vacuum's power.
6. Insert the HEPA Filter back into the Dust Collecting Bin.
7. Reattach the Dust Collecting Bin to the vacuum and rotate to secure it.

⚠ WARNING: DO NOT USE VACUUM ON OR NEAR WATER.

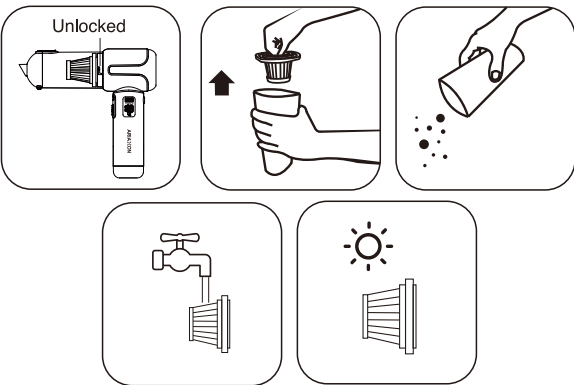

CARE INSTRUCTIONS

1. Wipe the vacuum clean with a dry cloth after each use.
2. To maintain strong suction, empty the Dust Collecting Bin and replace filter after every 3 uses or anytime large particles or a large amount of dust accumulate around the filter.
3. When cleaning the old filter, warm/hot water works best.
4. DO NOT USE VACUUM ON OR NEAR WATER.
5. Store vacuum at room temperature and keep away from high temperatures or heat sources.

⚠ WARNING: THIS IS NOT A TOY. KEEP AWAY FROM CHILDREN.

WARRANTY


We warrants this product against defects in material and/or workmanship under normal use. To view our warranty policy or to submit a claim.

LEGAL WARRANTY

The period of guarantee and any other conditions relating to it, is governed by the legislation of the country where the product was purchased.



ARIAXON
Engineered for Deep Clean

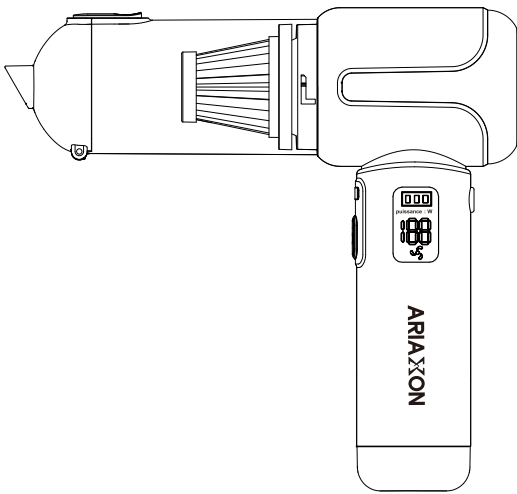

USER MANUAL
Portable Vacuum Cleaner

PetForce Pro AX-PF01

www.ariaxon.com - support@ariaxon.com




Thank you for purchasing the vacuum cleaner and air duster.

Please take a moment to read this user manual thoroughly, and keep it for future reference. This manual explains the features and functions of this product.


SPECIFICATIONS

Input:	5V/2A, 9V/2A
Charging Time:	2-3.5 hours
Weight:	450g
Battery:	3.7V 2500mAh * 3 (11.1V 2500mAh)

PACKAGE INCLUDES

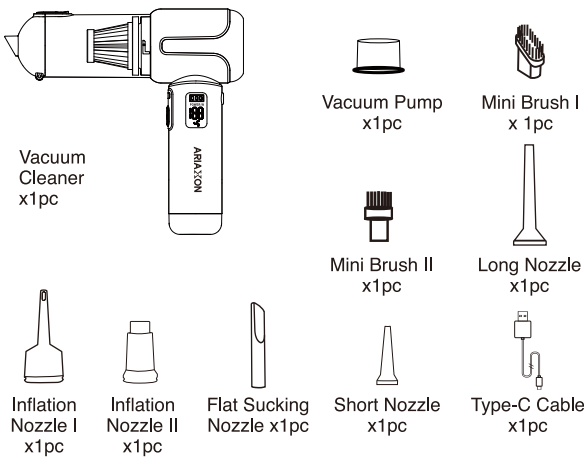

PRODUCT DIAGRAM

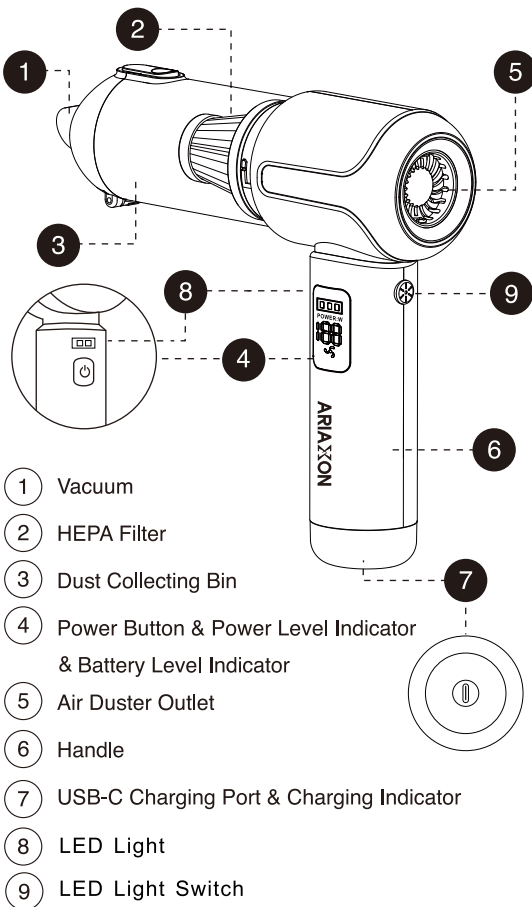


HOW TO CHARGE

- When the bottom Battery Indicator LED starts flashing it's time to charge the product.


Battery Indicator	Full Battery	Needs Charging

- Plug the USB-C end of the included charging cable into the charging port on the bottom of the vacuum.
- Plug the USB-A end of the included charging cable into any USB-A port such as your PC/laptop, or a USB wall adapter (not included).

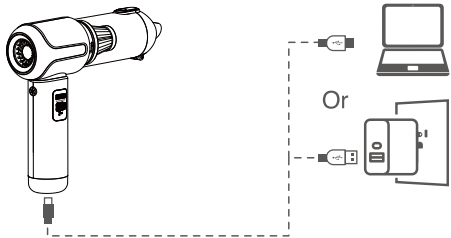


NOTE: PC/laptop ports output 1A of power and will take longer to charge the vacuum. For quickest charge times, use a 5V/9V,2A charging adapter (not included).

- The Charging Indicator LED will light up Red while the vacuum is charging, and will light up Green once the vacuum is fully charged.

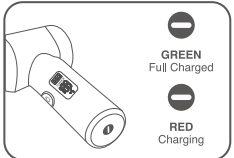


HOW TO USE


NOTE: For longer battery life it is highly recommended that you charge the vacuum up to a full battery before its first use.

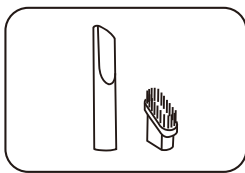


1. Connect the desired accessories to the vacuum end, or to the air duster end, of the vacuum.

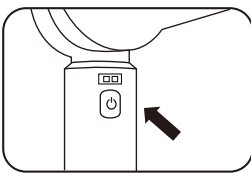

2. Press-and-hold the power switch until the vacuum turns on.

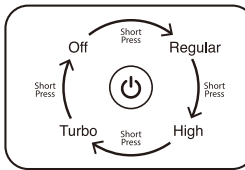

3. Press the power switch again for the vacuum to go into High power mode, and press it again for the vacuum to go into Turbo power mode.

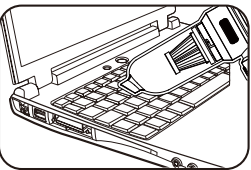

4. Clean your items.

POWER LED	Regular Power	High Power	Turbo Power
	35W	50W	100W